

001 – ASSEMBLING THE COIL SUPPORT

Take the bag labelled with a 1 out of the box, you should have these parts:



Starting from the left of the threaded rod, put the parts together in this order:


- 1 x M6 locking nut
- 1 x M6 small washer
- The mounting bracket oriented as in the picture below
- 1 x M6 small washer
- 2 x M6 nut
- 1 x M6 small washer
- 1 x M6 large washer
- 1 x M6 small washer
- 2 x M6 nut
- 2 x M6 nut
- 1 x M6 small washer
- 1 x M6 large washer
- 1 x M6 small washer
- 1 x M6 locking nut



Leave some extra thread on the left (around 10 mm or 0.39"):



Then tighten all the nuts, the result should look like this:

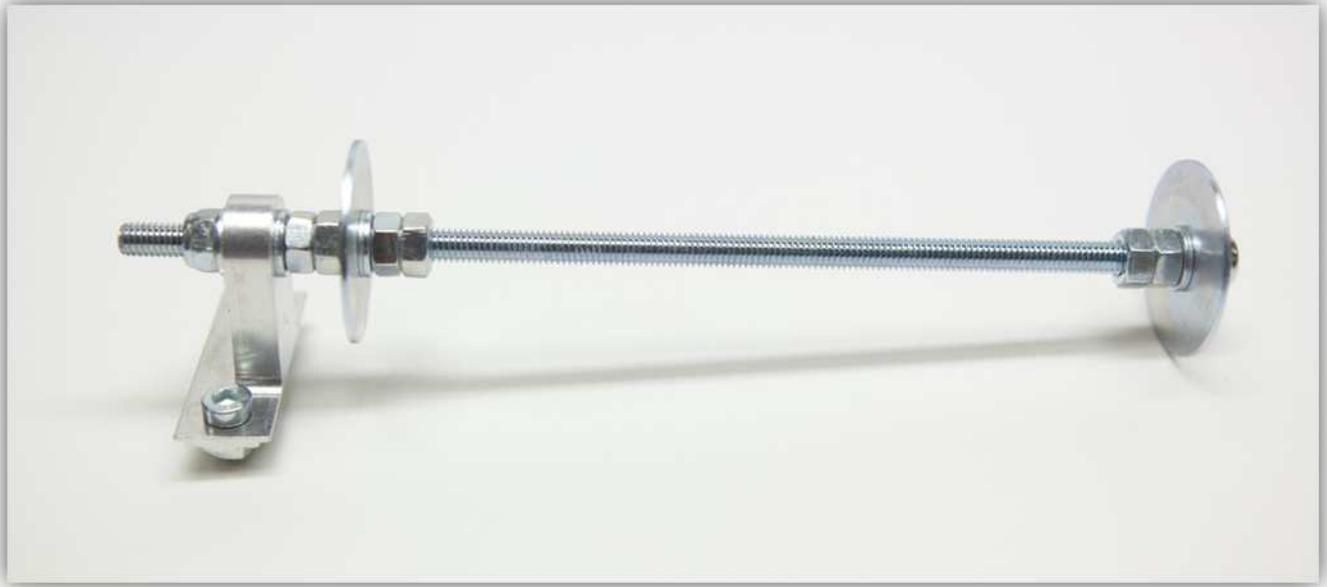

Put this part aside, you will need it later in the build.