

011 – FINISHING THE FRAME

Take all the parts out of the bag labelled with 35.




You will also need the COIL SUPPORT you assembled earlier.



Now take 2 pieces as shown in the picture below out of the bag containing the plastic parts (PROFILE MOUNTS)



Slide these PROFILE MOUNTS in the right upright ALUMINIUM PROFILE as shown in the pictures below.

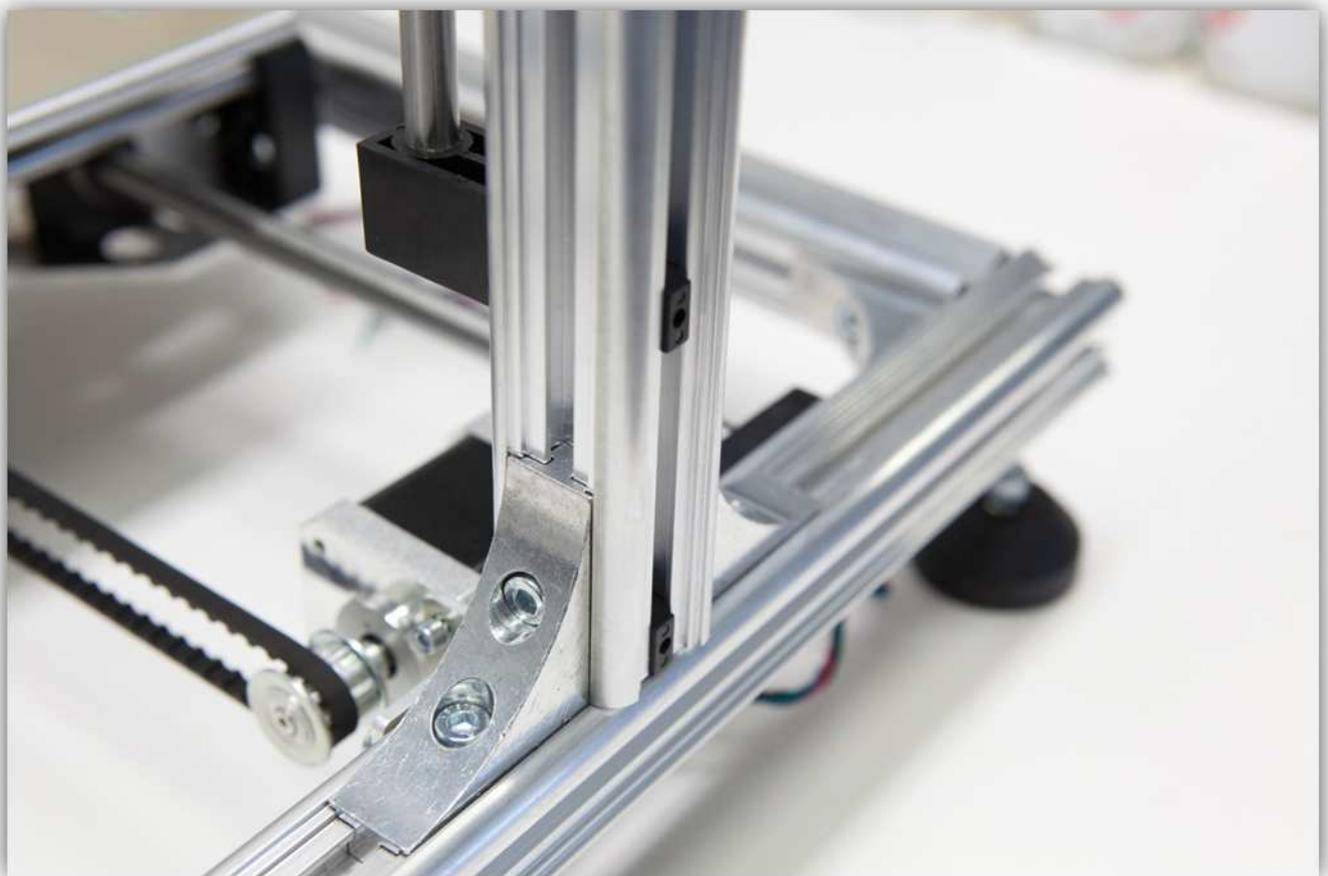

Next slide the COIL SUPPORT in the same profile and align it with the horizontal ALUMINIUM PROFILE. Tighten it firmly.



Place an END CAP on every open ALUMINIUM PROFILE end.



